

We care!

UPANG

PLUS LED

— UPANG PLUS LED USER MANUAL BOOK —




Please read the user manual completely before use to prevent possible risks of damage or misuse

3D UV LED sterilization

Upang is bright!

When door is opened, the glaring lights will welcome you.

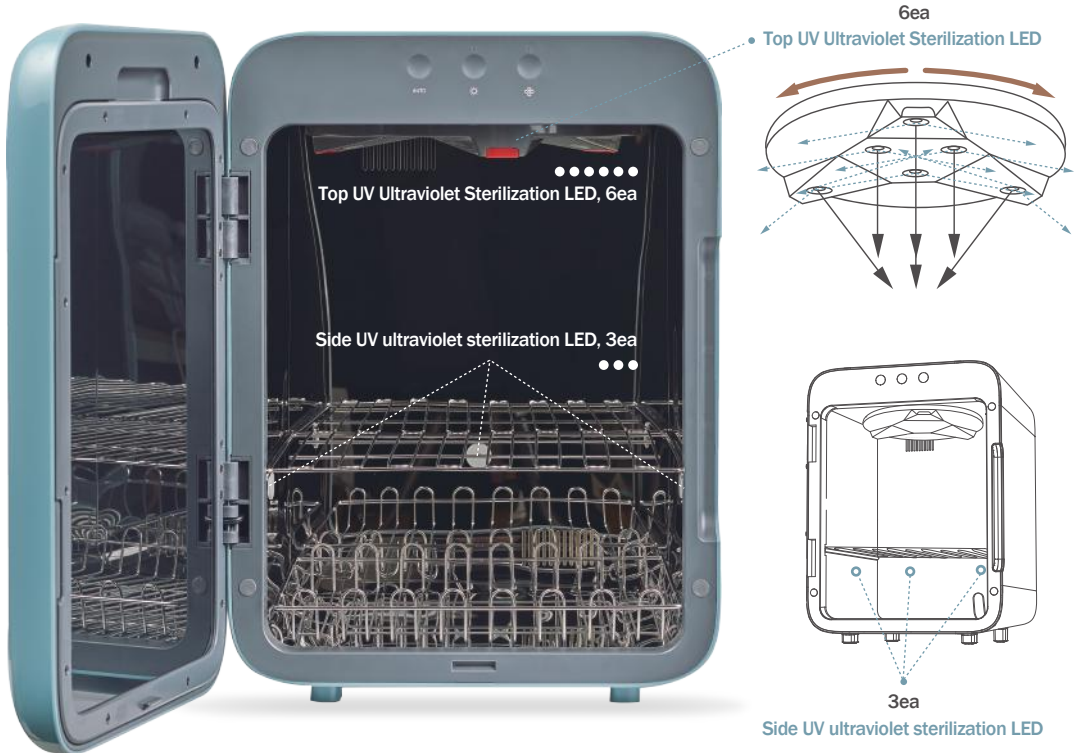

CONTENTS LIST

PAGE 02 3D UV LED Sterilization

PAGE 05 Safety Precautions

PAGE 03 Dot Matrix Display

PAGE 06 Directions

PAGE 04 Use Sequence/
Nomenclature Of Each Part

PAGE 07 TIPS for proper use/cleaning methods instruction

PAGE 09 4 Cycles and other fuction / COLOR

DOT MATRIX DISPLAY



AUTO

AUTO text is shown when auto mode is working

UV

UV text is shown when sterilization mode is working

VENT

VENT text is shown when ventilation mode is working

TURBO

TURBO text is shown when turbo auto mode is working *PRESS START button 2 times


KEEP

KEEP text is shown when storage mode is working *PRESS VENT button for 5seconds to turn ON/OFF


- If you press the START button for 5 seconds, the mute function can be turned on/off.

Add the sensibility to new Upang Plus LED with
'DOT MATRIX DISPLAY'

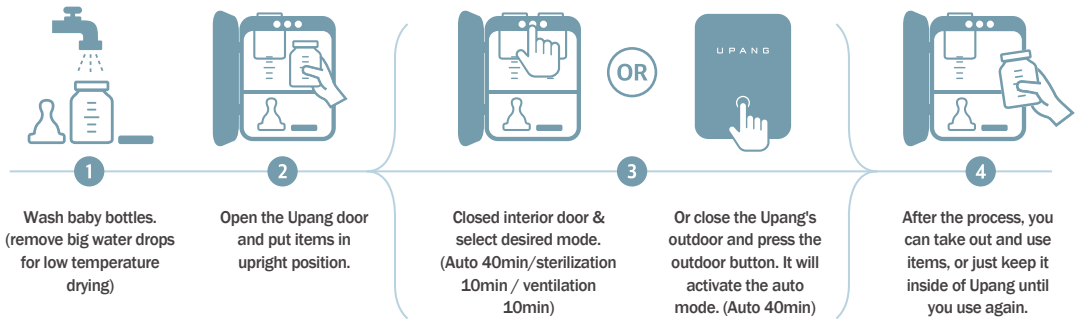


USE SEQUENCE



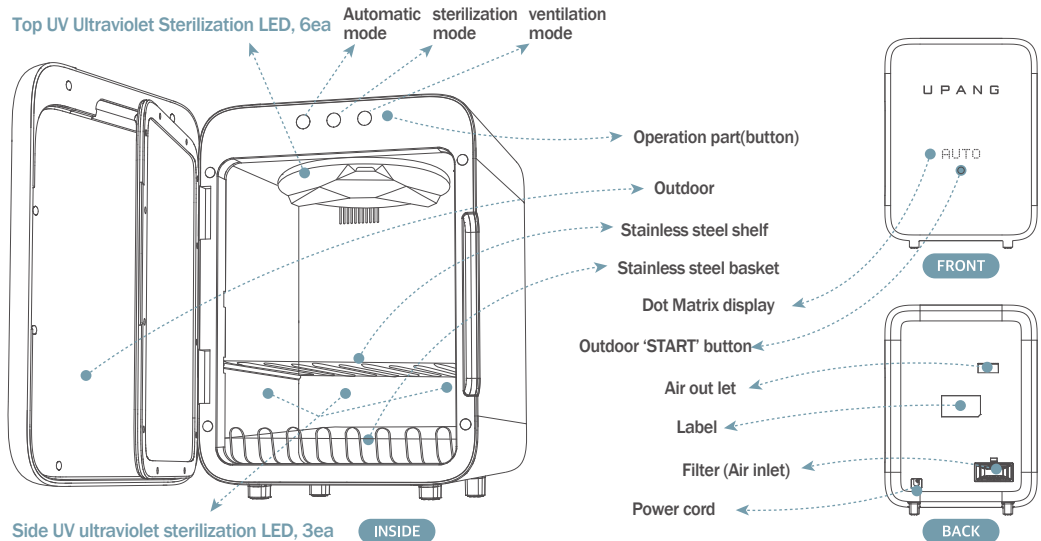










NOMENCLATURE OF EACH PART









SAFETY PRECAUTIONS

-  **danger** It indicates the user has a risk of death or serious injury
-  **warning** It indicates the user has a risk of serious injury
-  **caution** It indicates the user has a risk of injury of property damage

-  **danger** Do not use a faulty or loose outlet.
-  **danger** Do not put any inflammable product
-  **danger** Do not touch the power plug with wet hands.
-  **danger** Do not use multiple power plugs simultaneously on one outlet.
-  **danger** Do not clean it before unplugging, splash water directly, or wipe it with corrosive material.
-  **danger** Wipe the contact part of power plug if it has dirt or water.

-
-  **warning** Close the door tightly and use it.
 -  **warning** If it makes strange sound, smell or smoke, unplug immediately and close the door and contact customer center.
 -  **warning** Do not set up the product in tilted area. ※It can cause a product damage.
 -  **warning** If its surface is damaged, do not use it and contact to customer center.
 -  **warning** If there's disorder in power cord and plug, contact to customer center.

-
-  **caution** Please tell children or elderly how to use it when they operate it.
 -  **caution** Do not trap or contain living creatures in it.
 -  **caution** Do not change the voltage. * It has a risk of fire and explosion.
 -  **caution** Do not put anything on top of the product. ※ It can cause product damage.
 -  **caution** Do not disassemble, repair, or modify randomly. ※ please contact customer center if the product has a problem.
 -  **caution** Do not use in a spot where direct sunlight is exposed. ※ Products may be deformed or discolored.

DIRECTIONS

FREESTANDING METHOD | Simply plug in a power source without a separate installation, and it's easy to use wherever you go.


1 STORAGE MODE :

- Upang will sterilizer for 2 mins in every 3 hours.
- AUTO Cycle is finished normally, storage mode do not activated until user opens door.




Auto mode

This is a method of activating warm air drying and UV sterilization simultaneously. warm air drying takes 30min, UV sterilization 10min, ventilation 30min by pressing button. It takes a total of 40min. Ventilation activates from 10min after drying.

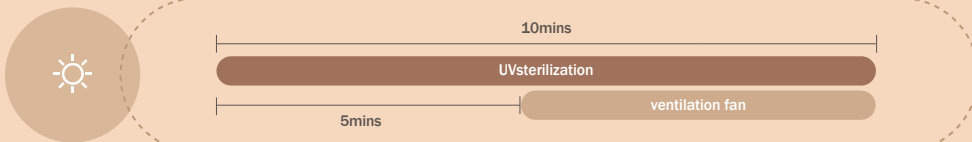

Sterilization mode

When you don't need to dry a bottle or when you want to only sterilize it, You can press it. UV sterilization takes 10min, ventilation 5min. It takes a total of 10 minutes. Ventilation activates from 5min after UVsterilization works to finish.

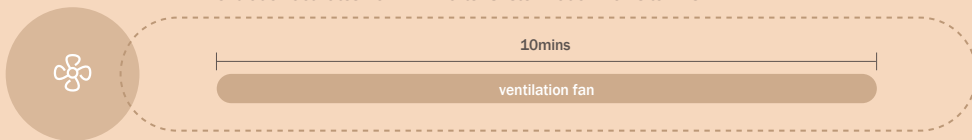

Ventilation mode

This button is used to remove the odor from the inside of the sterilizer. When sterilize bottles, It serves to ventilate the smell of milk powder, breast milk, and ultraviolet light. Ventilation time will require 10 minutes by pressing this button.



Turbo mode

It takes a total of 60min. Ventilation activates from 10min after drying

OPERATION PRECAUTIONS

- 1 When you open the door while it is operating, it stops operation automatically. It is designed for user safety.
- 2 **Auto mode** is activated by touching “start” button on the exterior outdoor or opening the exterior door and touching “auto” button.
- 3 Sterilization or ventilation is activated by opening the exterior door and touching the inner button.

PRECAUTIONS FOR CUSTOMERS

- 1 This manual is intended to be based on the specifications of the product.
 - 2 The manufacturer and distributor shall not be liable for damages caused by improper use and mishandling.
 - 3 Upang is safe to use for all itmes including latex but latex may incur some odd odor to its latex composition in a small confined space.
 - 4 Pre-installation precautions: Non-slip rubber at the bottom of the product may cause mark on surface depending on the surface material. Please take necessary precaution.
-

TIPS FOR PROPER USE

If you read well and use it correctly, you can use the Upang more usefully.

- 1 Place the baby bottles with a constant space between to prevent them from sticking or overlapping.
- 2 The internal condition of Upang must remain dry in order for sterilization state to last for a long time.
- 3 When you put baby bottle into Upang, make sure the moisture to be absent as much as possible.
- 4 After cleaning baby bottles and teats, it's recommended to leave them in the basket for a while and shake off excess water and before putting them in Upang.
- 5 Load objects require sterilization in upright position.
- 6 Leave space between objects to prevent overlapping during UV sterilization.
- 7 For products that don't require drying, press sterilization button to sterilize for only 10 minutes.
- 8 Please put the baby bottles and teats in after cleaning. Put the teats into Upang after removing cap from the silicon area and washing it.

CLEANING METHODS INSTRUCTION

- 1 **Do not pour or spray water to wash the product.**
Water entering the inside of the body causes failure. (can be a cause of short circuit or electric shock)
- 2 To clean inside, place a steam towel on the inside shelf for a while and wipe it with a dry towel.
- 3 Stop operation, unplug it, apply gloves, and clean and inspect.
- 4 Do not use sponge, cleaner, jazzy, benzene, bleach, etc. (This causes spillage or defect.)
- 5 Clean the filter by simply shaking it in the running water and removing only the dust. Cleaning with a brush and a similar tools strongly may damage superfine fibers net.

4 Cycles and other function.

Cycle	AUTO	UV	Ventilation	Turbo	Storage	Warning
SIGN					KEEP	
Duration	40min	10min	10min	60min	2min every 3h	-
PROGRAM	DRY+UV+VENT	UV	VENTILATION	POWER DRY +UV+VENT	UV	-

*When the door opens during operation, it starts over again to keep everything sterilized properly.

COLOR

The power of Original, UPANG Plus LED will continue its reputation.



UPANG PLUS LED
Green



UPANG PLUS LED
Beige



UPANG PLUS LED
Orange



UPANG PLUS LED
Gray



UPANG PLUS LED
White



UPANG PLUS LED
Blue



Upang we care for you!

UPANG

MADE IN KOREA



Korea Testing & Research Institute
Electromagnetic inspection completed **R-R-UPY-UP901-GR**
Safety certification **YA07079-20001**

-
- Product name : Electrical UV sterilizer
 - Basic model name : UP-901
 - Product model name : See rear face of product main body
 - Rated voltage : 100~120V / 50~60Hz
220~240V / 50~60Hz
 - Product dimension : 325mm X 405mm X 446mm
 - Rated power consumption : 80W
 - Manufacturer : Bluecare Co., Ltd.
 - Manufacturing country : Republic of Korea
 - Sterilization power : 99.9%